

## EDGE G2, CHANGING BELT DIRECTION

Follow the menu tree example to change the belt direction.

**KNOW YOUR FINGER PATTERN!!**

If your finger pattern is not reversible, meaning the left top half is a mirror of the right, the fingers must be reversed.

When in doubt, call EDGE: 724-628-3050

